


# FITTING INSTRUCTIONS

## Picket Fencing Panels

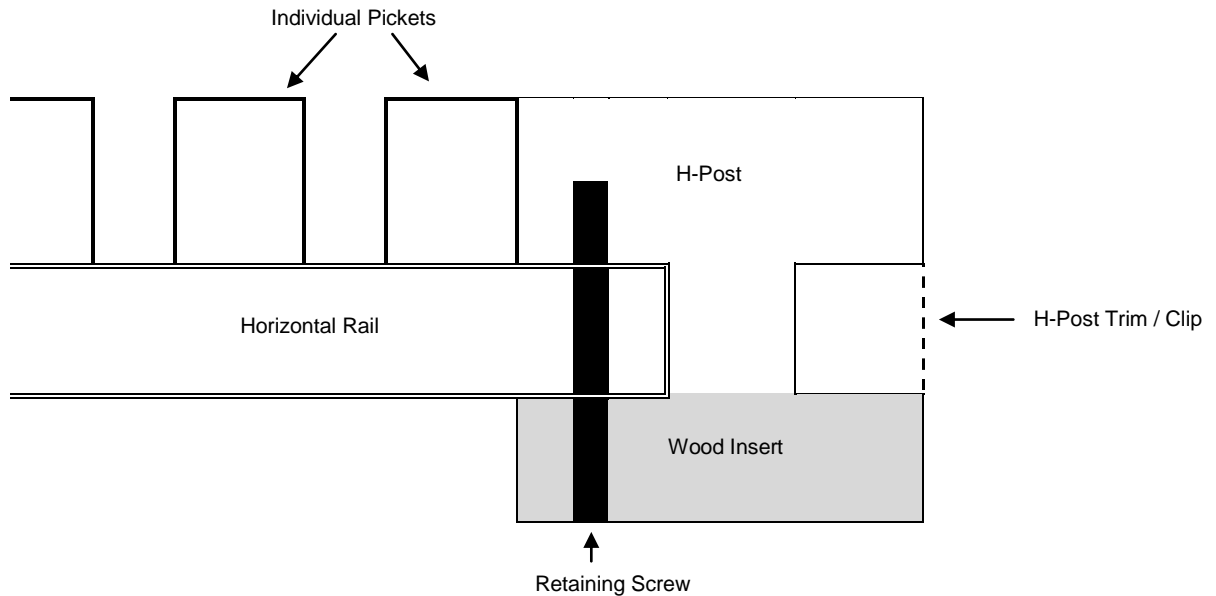

1. Fit the end post of the run of fencing either, to the wall (as per post fitting instructions) or fixed into the ground.
2. If fitting into the ground, we recommend a hole approx 150mm square and 500mm deep, with the post held in place by concrete.
3. Using the panel(s), mark out the spacing for the remaining posts and repeat step 2 for each post.
4. Slide the panels into the slots in the posts and fix them in place using the 3 inch screws and caps provided. Place the screws in the horizontal rails (see diagram above).
5. Cut pieces of blanking strip to fill the spaces above the panels in the posts and also between and under horizontal rails.
6. Fit the post caps.

If you experience any difficulty in fitting your fencing panels, please do not hesitate to contact the office on **01952 292852** where we will be happy to assist you further.