


# FITTING INSTRUCTIONS



## H-Post

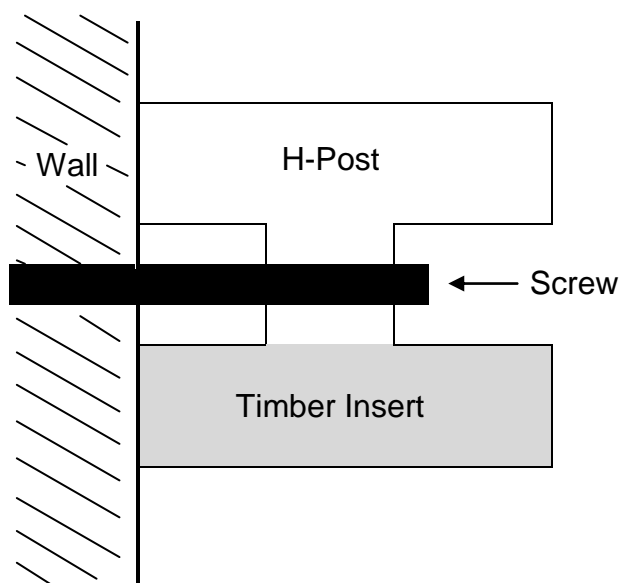

### Post fitted to a wall

1. Remove the blanking strip from the post.
2. Place the post up against the wall. Make sure the timber insert is to the back of the post (towards the property).
3. Square the post up using a spirit level.
4. Drill through the centre part of the post (where the blanking strip was) using a 10mm drill bit.
5. Mark the wall behind the post and drill using a 10mm masonry drill bit.
6. Attach the post using 3 x 140mm grey wall fixings. The top cap must be fitted before tightening the wall fixings up fully.
7. Replace the blanking strip to cover the wall fittings.

If you experience any difficulty in fitting your posts, please do not hesitate to contact the office on **01952 292852** where we will be happy to assist you further.